NOTE:

Please read all instructions carefully before using this product

Table of Contents

Safety Notice

Hardware Pack

Assembly Instruction

Parts List

Resistance Chart

Warranty

Ordering Parts

Model MWM-8900


Retain This Manual for Reference

08-12-05

OWNER'S MANUAL



MARCY CORNER GYM MWM-8900

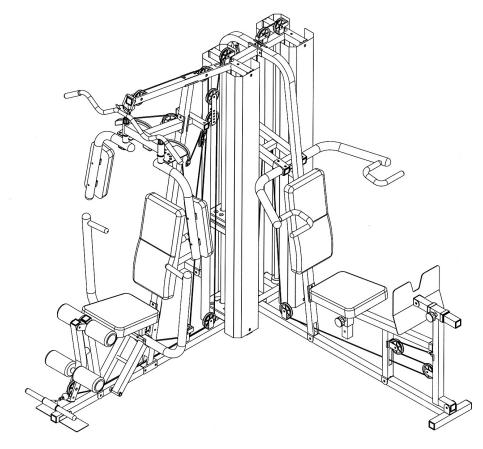

IMPEX INC.

14777 DON JULIAN RD., CITY OF INDUSTRY, CA 91746 Tel: (800) 999-8899 Fax: (626) 961-9966

www.impex-fitness.com info@impex-fitness.com

TABLE OF CONTENTS

BEFORE YOU BEGIN	1
IMPORTANT SAFETY NOTICES	2
HARDWARE PACK	4
ASSEMBLY INSTRUCTIONS	
PARTS LIST	29
RESISTANCE CHART	30
WARRANTY	
ORDERING PARTS	31

BEFORE YOU BEGIN

Thank you for selecting the MARCY MWM-8900 CORNER GYM by IMPEX INC. For your safety and benefit, read this manual carefully before using the machine. As a manufacturer, we are committed to provide you complete customer satisfaction. If you have any questions, or find there are missing or damaged parts, we guarantee you complete satisfaction through direct assistance from our factory. To avoid unnecessary delays, please call our TOLL-FREE customer service number. Our Customer Service Agents will provide immediate assistance to you.

Toll-Free Customer Service Number
1-800-999-8899
Mon. – Fri. 9 a.m. – 5 p.m. PST
www.impex-fitness.com
info@impex-fitness.com

IMPORTANT SAFETY NOTICE

PRECAUTIONS

This exercise machine is built for optimum safety. However, certain precautions apply whenever you operate a piece of exercise equipment. Be sure to read the entire manual before you assemble or operate your machine. In particular, note the following safety precautions:

- 1. Keep children and pets away from the machine at all times. DO NOT leave children unattended in the same room with the machine.
- 2. Only one person at a time should use the same station.
- 3. If the user experiences dizziness, nausea, chest pain, or any other abnormal symptoms, STOP the workout at once. CONSULT A PHYSICIAN IMMEDIATELY.
- 4. Position the machine on a clear, leveled surface. DO NOT use the machine near water or outdoors.
- 5. Keep hands away from all moving parts.
- 6. Always wear appropriate workout clothing when exercising. DO NOT wear robes or other clothing that could become caught in the machine. Running or aerobic shoes are also required when using the machine.
- 7. Use the machine only for its intended use as described in this manual. DO NOT use attachments not recommended by the manufacturer.
- 8. Do not place any sharp object around the machine.
- 9. Disabled person should not use the machine without a qualified person or physician in attendance.
- 10. Before using the machine to exercise, always do stretching exercises to properly warm up.
- 11. Never operate the machine if the machine is not functioning properly.


CARE AND MAINTENANCE

- 1. Lubricate moving parts with WD-40 or light oil periodically.
- 2. Inspect and tighten all parts before using the machine.
- 3. The machine can be cleaned using a damp cloth and mild non-abrasive detergent. DO NOT use solvents.
- 4. Maximum user's weight: 300 lbs.

WARNING: BEFORE BEGINNING ANY EXERCISE PROGRAM, CONSULT YOUR PHYSICIAN. THIS IS ESPECIALLY IMPORTANT FOR INDIVIDUALS OVER THE AGE OF 35 OR PERSONS WITH PRE-EXISTING HEALTH PROBLEMS. READ ALL INSTRUCTIONS BEFORE USING ANY FITNESS EQUIPMENT. IMPEX INC. ASSUMES NO RESPONSIBILITY FOR PERSONAL INJURY OR PROPERTY DAMAGE SUSTAINED BY OR THROUGH THE USE OF THIS PRODUCT.


SAVE THESE INSTRUCTIONS.

WARNING LABEL REPLACEMENT

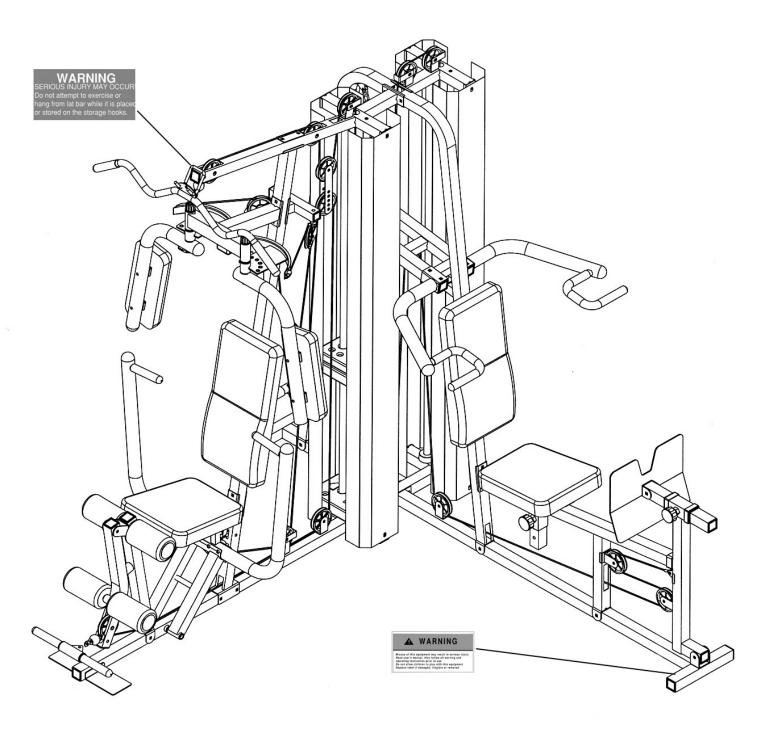


The warning labels shown here have been placed on the Rear Base and Upper Frame. If the labels are missing or illegible, please call customer service at 1-800-888-8899 for replacements. Apply the labels in location shown.


HARDWARE PACK

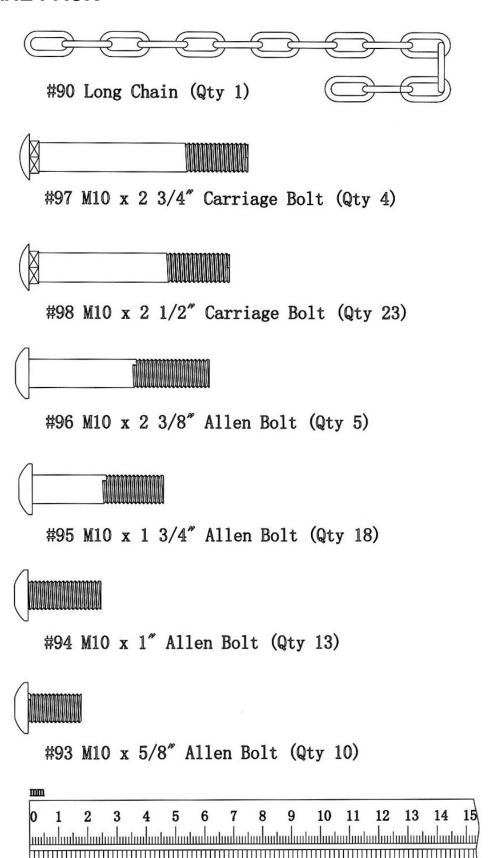

HARDWARE PACK

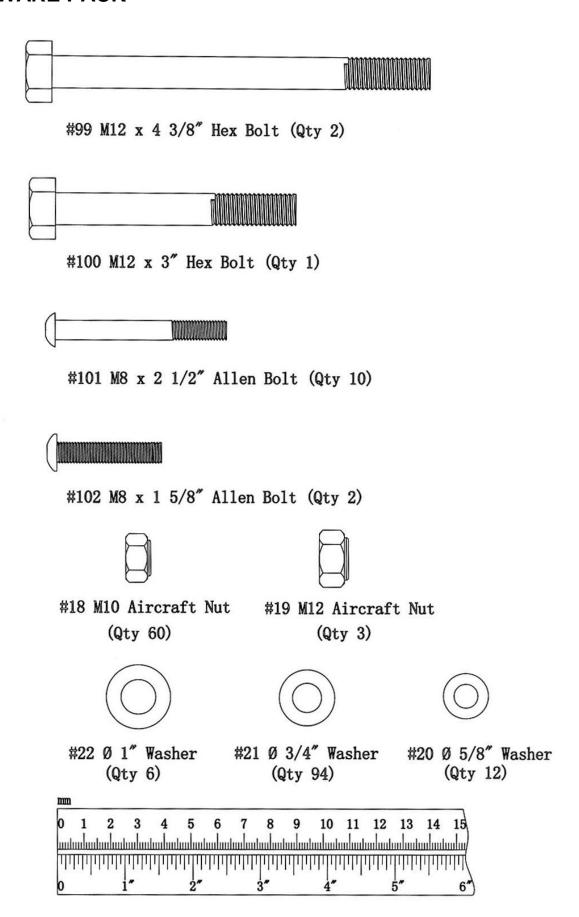

HARDWARE PACK

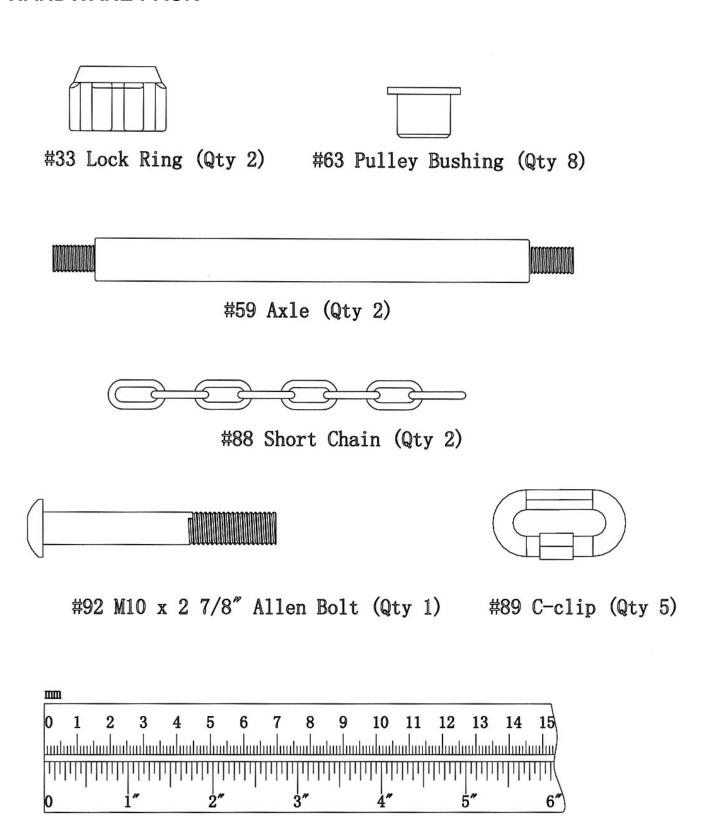


ASSEMBLY INSTRUCTION

Tools Required Assembling the Machine: Two Adjustable Wrenches and Allen Wrenches NOTE: It is strongly recommended two or people assembling this machine to avoid possible injury.


STEP 1 (See Diagram 1)

- A.) Place the Right Base Frame (#1) on a flat surface. Make sure there is enough space around to assemble the machine.
- B.) Insert four Guide Rods (#4) into the holes on the Right Base Frame. Secure each Guide Rod from the bottom with a M10 x 1" Allen Bolt (#94).
- C.) Slide four Ø 2 ½" x 1" Rubber Bumpers (#86) onto the Guide Rods.

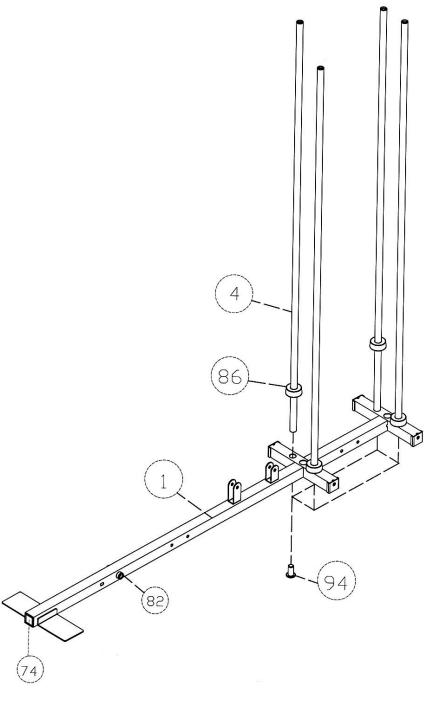


STEP 2 (See Diagram 2)

- A.) Attach the Left Base and the Rear Base Frame (#2 & #3) to the Right Base Frame (#1).
- B.) Align the holes and secure them with two M10 x 2 $\frac{1}{2}$ " Carriage Bolts (#98), \emptyset $\frac{3}{4}$ " Washers (#21), and M10 Aircraft Nuts (#18).

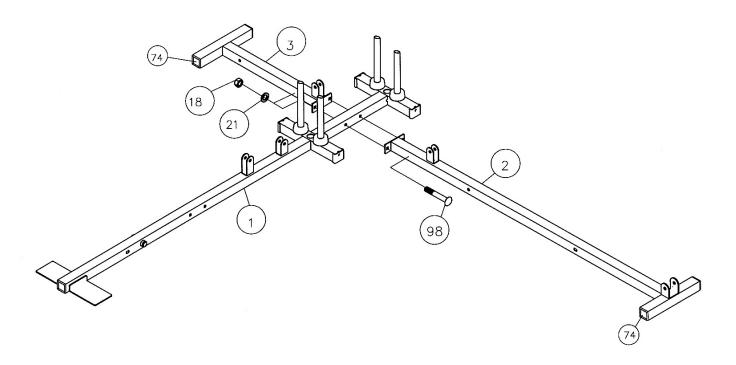


STEP 3 (See Diagram 3)

- A.) Slide fourteen Weight Plates (#54) onto the rear set of Guide Rods (#4). Make sure the groove on the plates all face toward the front of the machine.
- B.) Insert a Selector Rod (#53) into the center holes. Slide a Selector Stem (#34) onto the two Guide Rods. Slide a Ø 1 ¾" Rubber Bumper (#34) onto the Selector Rod.
- C.) Repeat procedures A & B above to install the other fourteen Weight Plates onto the front two Guide Rods. Make sure the grooves face the back of the machine.

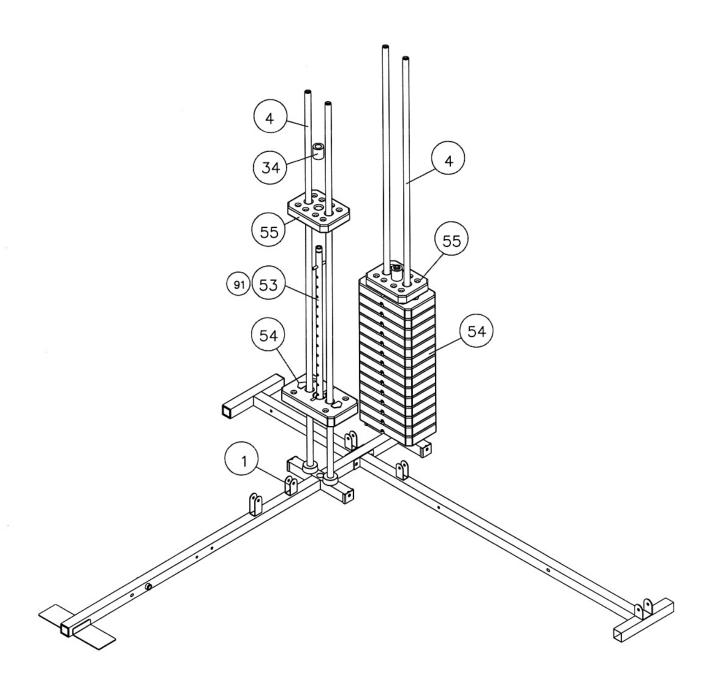


STEP 4 (See Diagram 4)

- A.) Do not tighten all Nuts and Bolts in this step until instructed to do so.
- B.) Attach the Right Vertical Frame (#5) to the Right Base Frame (#1). Secure it with two M10 x 2 ½" Carriage Bolts (#98), Ø ¾" Washers (#21), and M10 Aircraft Nuts (#18).
- C.) Attach the Left Vertical Frame (#6) to the Left Base Frame (#2). Secure it with one M10 x 2 ½" Carriage Bolt (#98), Ø ¾" Washer (#21), and M10 Aircraft Nut (#18).
- D.) Attach the Rear Vertical Frame (#7) to the Rear Base Frame (#3). Secure it with one M10 x 2 ½" Carriage Bolt (#98), Ø ¾" Washer (#21), and M10 Aircraft Nut (#18).

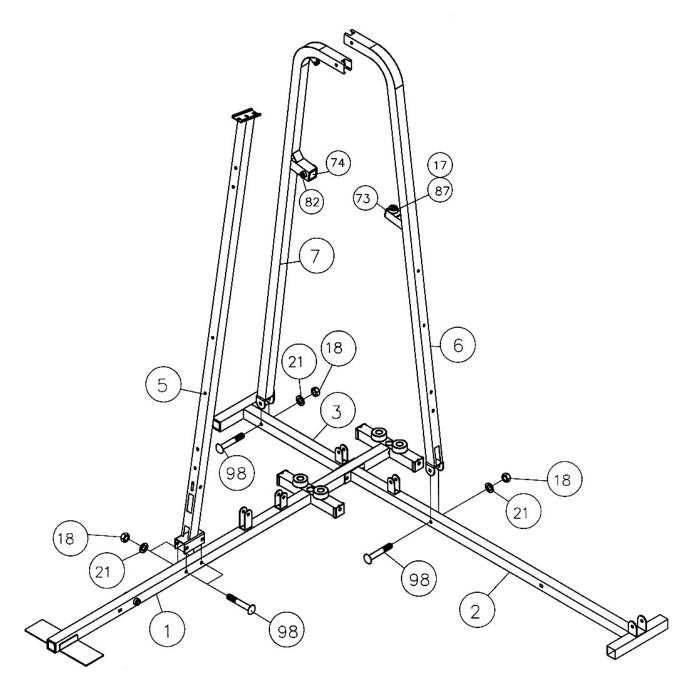


STEP 5 (See Diagram 5)

- A.) Do not tighten all Nuts and Bolts in this step until instructed to do so.
- B.) Place the Upper Frame (#8) onto the Right Vertical Frame (#5) and two Guide Rods (#4). Secure the Upper Frame to the Right Vertical Frame with two M10 x 2 ½" Carriage Bolts (#98), one 4 3/8" x 1 ¾" Bracket (#84), two Ø ¾" Washers (#21), and two M10 Aircraft Nuts (#18).
- C.) Secure the Upper Frame to the two Guide Rods with two M10 x 1" Allen Bolts (#94) and Ø 3/4" Washers (#21).
- D.) Place the Top Socket Assembly (#9) onto the two Guide Rods on the rear. Secure them with two M10 x 1" Allen Bolts (#94) and Ø 3/4" Washers (#21).
- E.) Connect the Top Socket Assembly (#9), Rear Vertical Frame (#7), Upper Frame (#8) and Left Vertical Frame (#6) together. Align the holes and secure them with two M10 x 2 ½" Carriage Bolts (#98), Ø ¾" Washers (#21), and M10 Aircraft Nuts (#18).

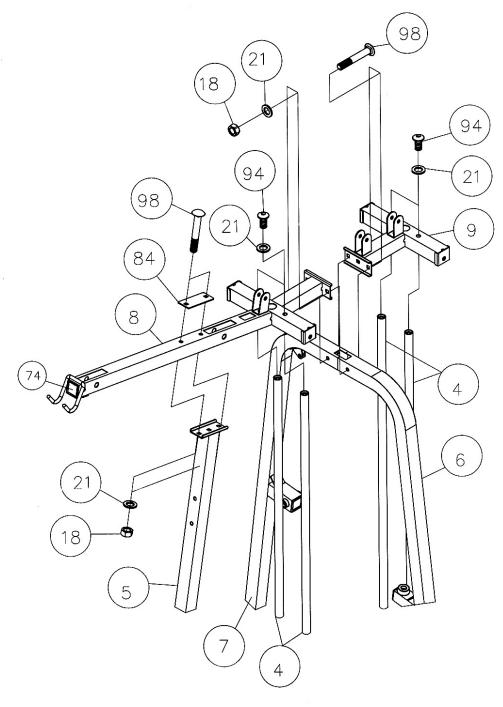


STEP 6 (See Diagram 6)

- A.) Securely tighten all Nuts and Bolts previously installed.
- B.) Attach the Right Seat Support (#10) to the Right Base Frame (#1). Secure it with one M10 x 2 ½" Carriage Bolt (#98), Ø ¾" Washer (#21), and M10 Aircraft Nut (#18).
- C.) Attach the Right Seat Support (#10) to the Right Vertical Frame (#5). Secure it with two M10 x 2 ½" Carriage Bolts (#98), one 4 3/8" x 1 ¾" Bracket (#84), two Ø ¾" Washers (#21), and two M10 Aircraft Nuts (#18).
- D.) Attach the Leg Developer (#26) to the bracket on the Right Seat Support. Secure it with a M10 x 2 7/8" Allen Bolt (#92), two Ø ¾" Washers (#21), and one M10 Aircraft Nut (#18). Do not over tighten the Nut and Bolt. Make sure the Leg Developer is able to swivel.
- E.) Attach the Butterfly Support Frame (#12) and the Butterfly Pulley Support (#46) to the Right Vertical Frame. Align the holes and secure them together with two M10 x 2 ½" Carriage Bolts (#98), Ø ¾" Washers (#21), and M10 Aircraft Nuts (#18).
- F.) Attach two Swivel Pulley Brackets (#49) to the Butterfly Pulley Support (#46). Secure each Bracket with one M12 x 4 3/8" Hex Bolt (#99), two Ø 1" Washers (#22), and one M12 Aircraft Nut (#19). Do not over tighten the Nut and Bolt. Make sure each Bracket is able to swivel.

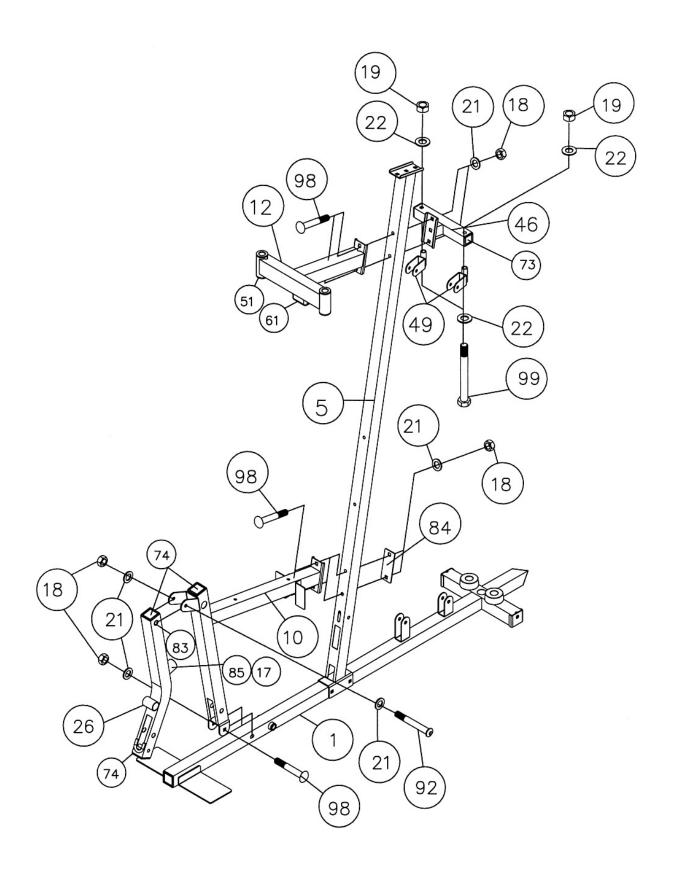


STEP 7 (See Diagram 7)

- A.) Attach the Left Seat Support (#11) to the Left Base Frame (#2). Secure it with one M10 x 2 ½" Carriage Bolt (#98), Ø ¾" Washer (#21), and M10 Aircraft Nut (#18).
- B.) Attach the Left Seat Support (#11) to the Left Vertical Frame (#6). Secure it with two M10 x 2 ½" Carriage Bolts (#98), one 4 3/8" x 1 ¾" Bracket (#84), two Ø ¾" Washers (#21), and two M10 Aircraft Nuts (#18).
- C.) Attach the Leg Press Frame (#25) to the bracket on the Left Base Frame. Secure it with one M12 x 3" Hex Bolt (#100), two Ø 1" Washers (#22), and one M12 Aircraft Nut (#19). DO not over tighten the Nut and Bolt. Make sure the Leg Press Frame is able to swivel.
- D.) Attach the Leg Press Plate (#52) to the Leg Press Adjustment Frame (#47). Secure it with one M10 x 2 ½" Carriage Bolt (#98), Ø ¾" Washer (#21), and M10 Aircraft Nut (#18).
- E.) Insert the Leg Press Adjustment Frame into the Leg Press Frame. Use a Lock Knob (#68) to secure it in selected position.

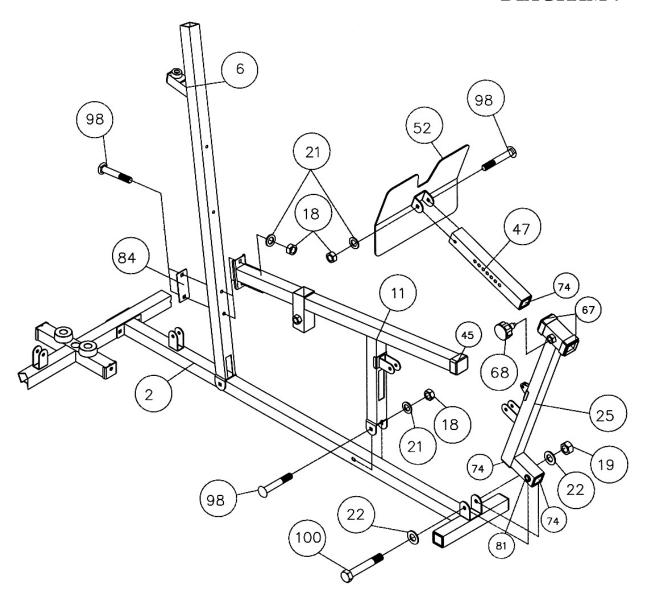


STEP 8 (See Diagram 8)

- A.) Insert the axle on the Right Butterfly (#15) through a Butterfly Adjustment Frame (#50) into the Butterfly Support Frame (#12). Secure it with one M10 x 5/8" Allen Bolt (#93), Ø ¾" Washer (#21), and Lock Ring (#33).
- B.) Thread a T-shaped Pull Pin (#66) into the hole on the Right Butterfly from the bottom. Use the Pin to adjust the Butterfly position.
- C.) Repeat the same procedures A & B above to install the Left Butterfly (#14).
- D.) Attach the Front Press Base (#29) to the Right Base Frame (#1). Secure it with one Axle (#59), two Ø ¾" Washers (#21), and two M10 Aircraft Nuts (#18).
- E.) Place the Front Press (#16) onto the Front Press Base. Secure it with four M10 x 2 ¾" Carriage Bolts (#97), Ø ¾" Washers (#21), and M10 Aircraft Nuts (#18).

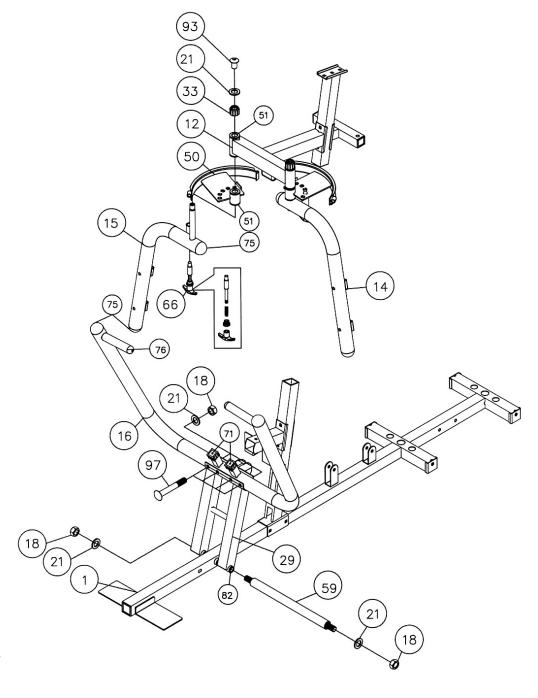


STEP 9 (See Diagram 9)

- A.) Attach the Vertical Press Base (#23) to the pivot on the Rear Vertical Frame (#7). Secure it with one Axle (#59), two Ø ¾" Washers (#21), and two M10 Aircraft Nuts (#18).
- B.) Attach one Vertical Press Arm (#24) to the Vertical Press Base. Secure it with two M10 x 2 ½" Carriage Bolts (#98), Ø ¾" Washers (#21), and M10 Aircraft Nuts (#18).
- C.) Repeat the same procedure to install the other Vertical Press Arm.

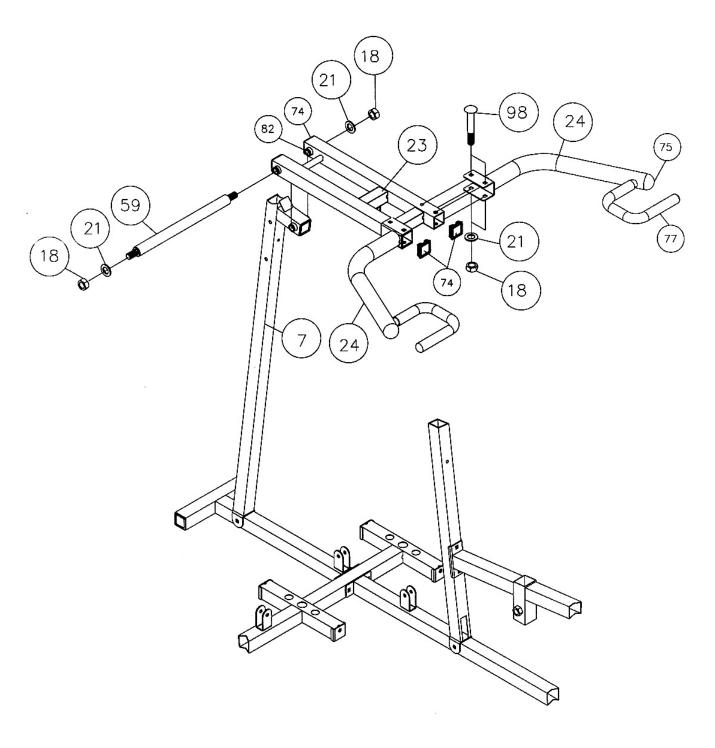


CABLE LOOP DIAGRAM

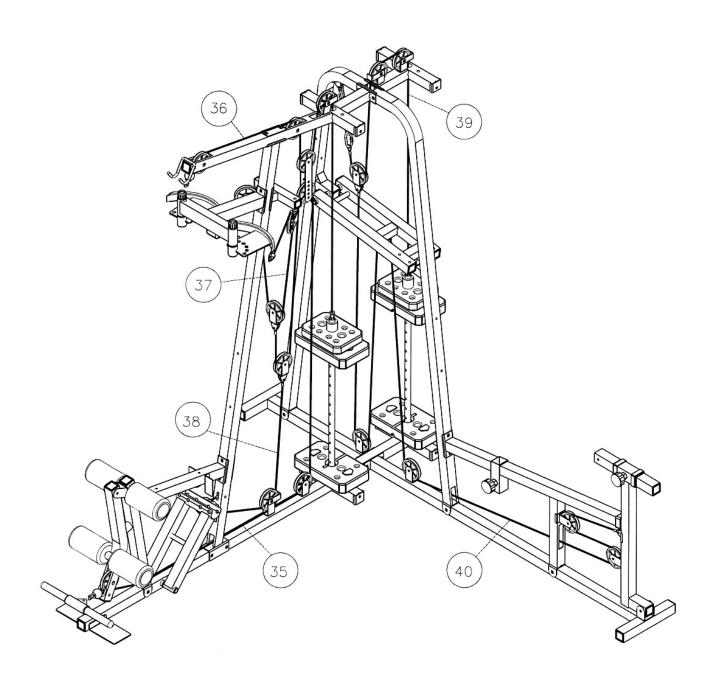


STEP 10 (See Cable Loop Diagram & Diagram 10)

- A.) Attach the 102" Upper Cable (#36) to the front opening on the Upper Frame (#8). Attach a Pulley (#64) to the opening. Secure it with one M10 x 2 3/8" Allen Bolt (#96), two Pulley Bushings (#63), and one M10 Aircraft Nut (#18). Draw the Cable towards the back of the machine. Note: Make sure the Ball Stopper is underneath the frame.
- B.) Attach a Pulley to the opening on the Upper Frame. Secure it with one M10 x 2 3/8" Allen Bolt (#96), two Pulley Bushings (#63), and one M10 Aircraft Nut (#18).
- C.) Draw the Cable around the Pulley and downward. Install a Pulley to the two Double Floating Pulley Brackets (#32). Secure it with one M10 x 1 ¾" Allen Bolt (#95), two Ø ¾" Washers (#21), and one M10 Aircraft Nut (#18). Let the bracket hanging for now. Draw the Cable around the Pulley then upward to the open bracket on the Upper Frame.
- D.) Install a Pulley to the bracket with a L-shaped Cable Retainer (#60).
- E.) Draw the Cable around the Pulley then downward to the Selector Rod (#53). Attach the ring on the Selector Pin (#62) to the Selector Rod (#53). Securely thread the end of the Cable into the Selector Rod. Use the Nut at the end of the Cable to tighten down the Bolt.

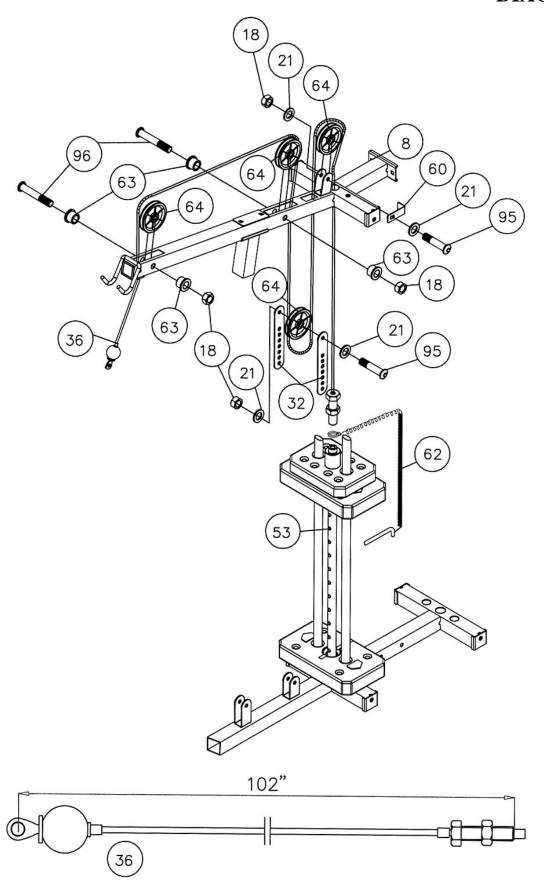


STEP 11 (See Cable Loop Diagram & Diagram 11)

- A.) Clip one end of the 76" Butterfly Cable (#37) to the slot on the Left Butterfly Adjustment Frame (#50). Draw the Cable through the slot then to the open Swivel Pulley Bracket (#49).
- B.) Attach a Pulley (#64) to the bracket. Secure it with one M10 x 1 ¾" Allen Bolt (#95), two Ø ¾" Washers (#21), and one M10 Aircraft Nut (#18).
- C.) Draw the Cable around the Pulley then downward. Install a Pulley to an Angled Floating Pulley Bracket (#31). Let the Bracket hanging for now.
- D.) Draw the Cable upward to the right Swivel Pulley Bracket on the opposite side. Install another Pulley.
- E.) Draw the Cable to the Right Butterfly Adjustment Frame and clip the end of the cable to the slot.

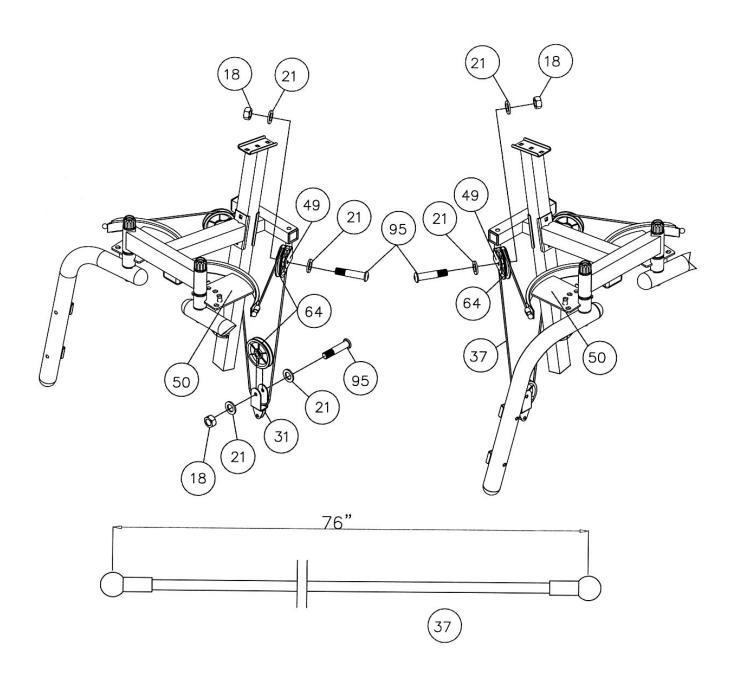


STEP 12 (See Cable Loop Diagram & Diagram 12)

- A.) Attach the 146" Lower Cable (#35) to the lower opening on the Leg Developer (#26). Attach a Pulley (#64) to the opening. Secure it with one M10 x 2 3/8" Allen Bolt (#96), two Pulley Bushings (#63), and one M10 Aircraft Nut (#18).
- B.) Draw the Cable underneath the Pulley to the opening on the bottom of Right Seat Support (#10). Attach a Pulley to the opening and secure it with one M10 x 2 3/8" Allen Bolt (#96), two Pulley Bushings (#63), and one M10 Aircraft Nut (#18).
- C.) Draw the Cable underneath the Pulley then through the bottom opening on the Right Vertical Frame (#5) to the second open bracket on the Right Base Frame (#1).
- D.) Attach a Pulley to the second open bracket. Secure it with one M10 x 1 ¾" Allen Bolt (#95), two Ø ¾" Washers (#21), and one M10 Aircraft Nut (#18).
- E.) Draw the Cable around the Pulley then upward to the Double Floating Pulley Bracket (#32) previously installed in Step-10. Install a Pulley to the Brackets on selected hole. After completing all the Cable installation, come back to this step and check the tension of the Cable loop system. If the cables are too loose, move up the Pulley on the Bracket. Move down the Pulley if the Cables are too tight.
- F.) Draw the Cable around the Pulley then downward. Install a Pulley to an Angled Floating Pulley Bracket (#31).
- G.) Draw the Cable around the Pulley then upward to the Angled Floating Pulley Bracket (#31) previously installed in Step-11. Secure the Cable to the Bracket with one M10 x 1" Allen Bolt (#94), two Ø ¾" Washers (#21), and one M10 Aircraft Nut (#18).

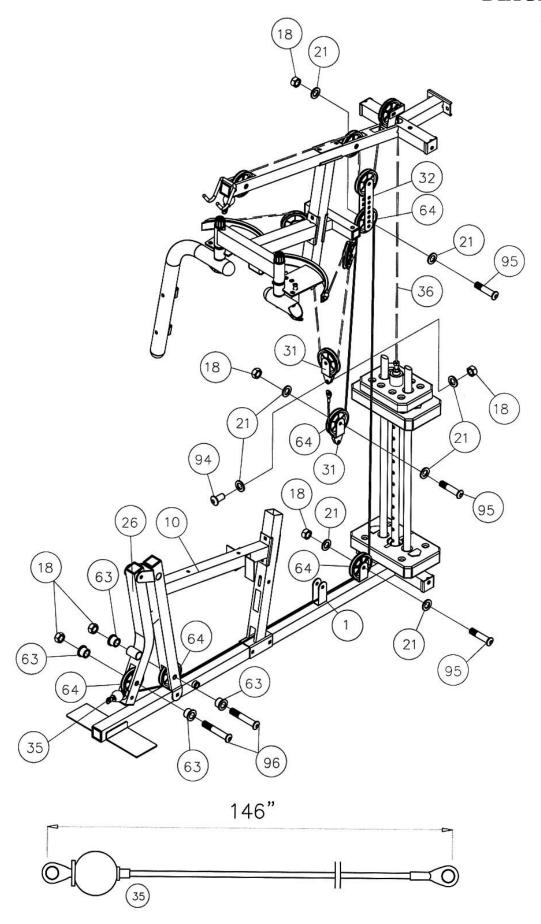


STEP 13 (See Diagram 13)

- A.) Attach the 49" Front Press Cable (#38) to the small opening on the Right Vertical Frame (#5). Secure the head of the Cable to the small opening with one M10 x 2 3/8" Allen Bolt (#96), two Ø ¾" Washers (#21), and one M10 Aircraft Nut (#18).
- B.) Draw the Cable to the open bracket on the Front Press Base (#29). Install a Small Pulley (#65) to the bracket.
- C.) Draw the Cable around the Small Pulley then back to the opening on the Right Vertical Frame (#5) then to the open bracket on the Right Base Frame (#1). Install a Pulley to the bracket with a L-shaped Cable Retainer (#60).
- D.) Draw the Cable around the Pulley then upward to the Angled Floating Pulley Bracket (#31) previously installed in Step-12.
- E.) Secure the end of Cable to the Bracket with one M10 x 1" Allen Bolt (#94), two Ø ¾" Washers (#21), and one M10 Aircraft Nut (#18).

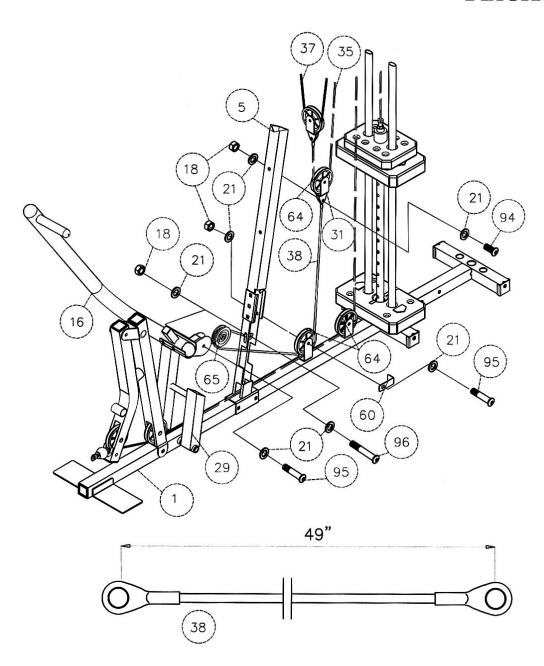


STEP 14 (See Diagram 14)

- A.) Attach a Short Chain (#88) to the open bracket on the Rear Vertical Frame (#7). Secure it with one M10 x 1" Allen Bolt (#94), two Ø ¾" Washers (#21), and one M10 Aircraft Nut (#18).
- B.) Connect the 94" Vertical Press Cable (#39) to the Short Chain with a C-clip (#89).
- C.) Install a Pulley to an Angled Floating Pulley Bracket (#31).
- D.) Draw the Cable around the Pulley then upward to the first open bracket on the Top Socket Assemble (#9).
- E.) Install a Pulley to the bracket with a L-shaped Cable Retainer (#60). Draw the Cable over the Pulley to the second open bracket. Repeat the same procedure to install another Pulley.
- F.) Draw the Cable around the Pulley then downward to the Selector Rod (#53). Attach the ring on the Selector Pin (#62) to the Selector Rod. Securely thread the end of the Cable into the Selector Rod. Use the Nut at end of the Cable to tighten down the Bolt.
- G.) After completing the cable installations, come back to this step and adjust the length of the Short Chain (#88). If the cables are too loose, shorten the Chain.

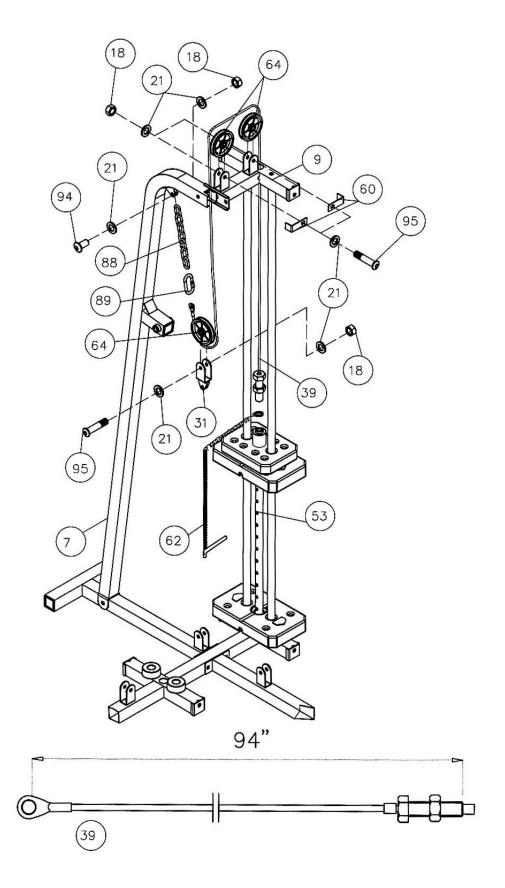


STEP 15 (See Diagram 15)

- A.) Attach the 216" Leg Press Cable (#40) to the bracket on the back of Leg Press Frame (#25). Secure it with one M10 x 1" Allen Bolt (#94), two Ø ¾" Washers (#21), and one M10 Aircraft Nut (#18). Draw the Cable to the open bracket on the Left Seat Support (#11). Install a Pulley to the bracket. Draw the Cable around the Pulley then back to the open bracket on the Leg Press Frame. Install another Pulley.
- B.) Draw the Cable around the Pulley then through the opening on the Left Seat Support (#11) and Left Vertical Frame (#6) to the open bracket on the Left Base Frame (#2). Install a Pulley to the bracket.
- C.) Draw the Cable underneath the Pulley then upward to the open bracket on the Vertical Press Base (#23). Install a Pulley.
- D.) Draw the Cable around the Pulley then downward to the open bracket on the Rear Base Frame (#3). Install a Pulley to the bracket.
- E.) Draw the Cable around the Pulley then upward to the Angled Floating Pulley Bracket installed in Step-14. Secure it with one M10 x 1" Allen Bolt (#94), two Ø ¾" Washers (#21), and one M10 Aircraft Nut (#18).

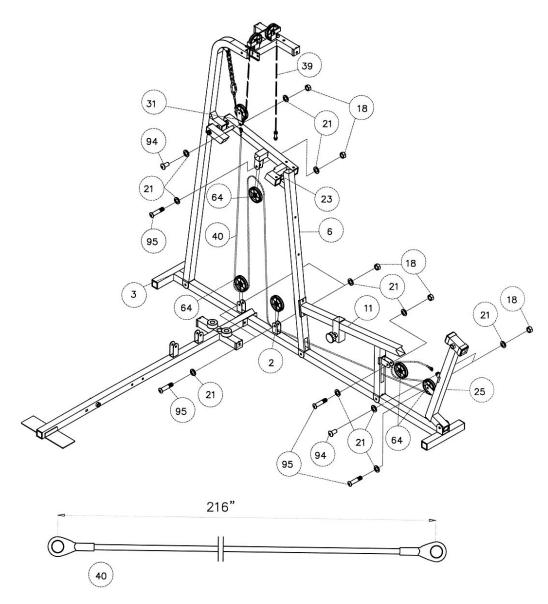


STEP 16 (See Diagram 16)

- A.) Place a Seat Pad (#42) onto the Seat Incline Adjustment Frame (#27). Secure it with two M8 x 1 5/8" Allen Bolts (#102) and Ø 5/8" Washers (#20). Insert the Frame into the opening on the Left Seat Support (#11). Use a Lock Knob (#68) to secure the Seat at selected height.
- B.) Insert two Foam Tubes (#13) halfway through the holes on the Right Seat Support (#10) and the Leg Developer (#26). Push four Vinyl Foam Rolls (#58) onto the Tubes from both ends. Plug four Foam Roll End Caps (#69) into the ends.
- C.) Connect the Arm Curl Handle (#56) to the 146" Lower Cable (#35) with one Long Chain (#90) and two C-clips (#89).
- D.) Connect the Lat Bar (#48) to the 102" Upper Cable (#36) with one Short Chain (#88), and two C-clips (#89).
- E.) Cover the Weight Plates with four Weight Stack Covers (#30). Secure each Weight Stack Cover with two M10 x 5/8" Allen Bolts (#93) and Ø ¾" Washers (#21).

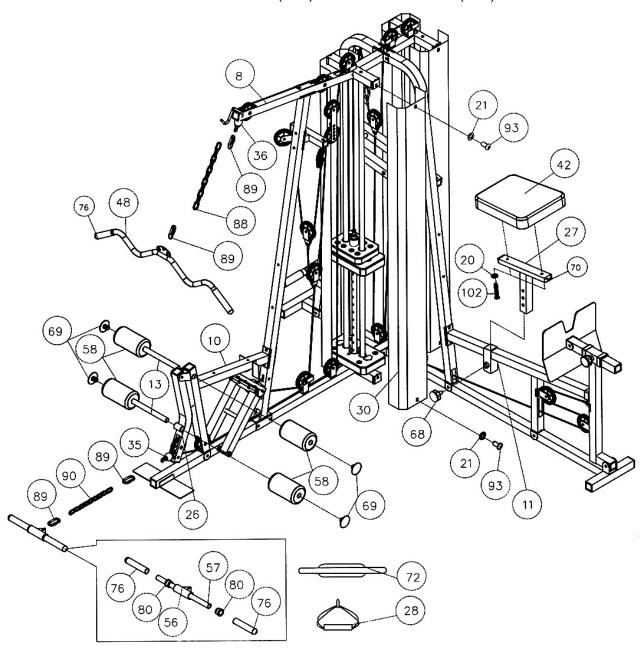

STEP 17 (See Diagram 17)

- A.) Attach the Backrest Board (#41) to the Right & Left Vertical Frames (#5 & #6). Secure each Board with two M8 x 2 ½" Allen Bolts (#101) and Ø 5/8" Washers (#20).
- B.) Place the Seat (#42) onto the Right Seat Support (#10). Secure it with two M8 x 2 ½" Allen Bolts (#101) and Ø 5/8" Washers (#20).
- C.) Attach four Arm Pads (#43) to the Right and Left Butterfly (#15 & #14). Secure each Arm Pad with two M8 x 2 ½" Allen Bolts (#101) and Ø 5/8" Washers (#20).
- D.) To maximize the performance of the gym, it is recommended to use light lubricant such as WD-40 on the four chrome Guide Rods, which the weight plates slide up and down on, to minimize friction.

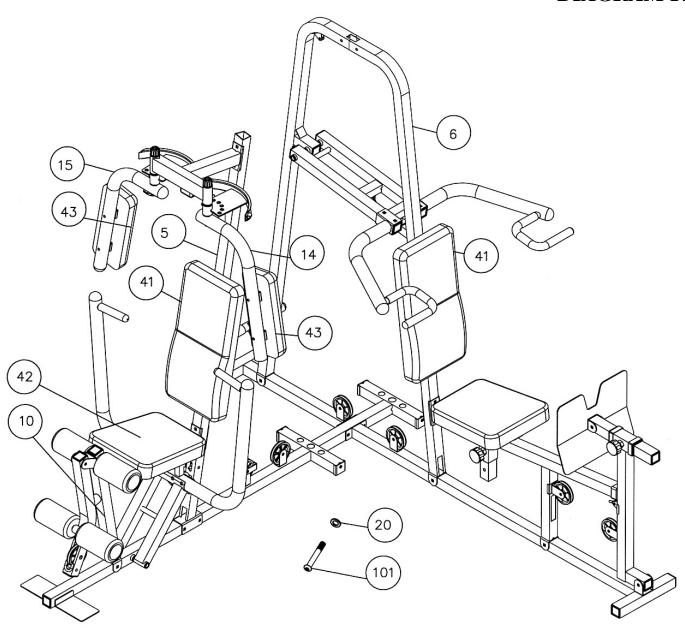

PARTS LIST

KEY	NO. DESCRIPTION	Q'ty			
1	Right Base Frame	1	56	Arm Curl Handle	1
2	Left Base Frame	1	57	Arm Curl Handle Bar	1
3	Rear Base Frame	1	58	Vinyl Foam Roll	4
4	Guide Rod	4	59	Axle	2
5	Right Vertical Frame	1	60	L-shaped Cable Retainer	4
	Left Vertical Frame	1	61	2" Square End Cap	1
6		1	62	Weight Selector Pin	2
7	Rear Vertical Frame	1	63	Pulley Bushing	8
8	Upper Frame	1	64	Pulley	21
9	Top Socket Assembly	1	65	Small Pulley	1
10	Right Seat Support	1			
11	Left Seat Support	1	66	T-shaped Pull Pin	2
12	Butterfly Support Frame	1	67	2" x 1 ¾" Sleeve	2
13	Foam Tube	2	68	Lock Knob	2
14	Left Butterfly	1	69	Foam Roll End Cap	4
15	Right Butterfly	1	70	2" x 1" End Cap	2
16	Front Press	1	71	1" Square End Cap	2
17	M6 x 5/8" Philips Screw	2	72	Ankle Strap	1
18	M10 Aircraft Nut	60	73	1 ½" Square End Cap	3
19	M12 Aircraft Nut	3	74	1 ¾" Square End Cap	17
20	Ø 5/8" Washer	12	75	Ø 2" Cone-shaped End Cap	8
21	Ø ¾" Washer	94	76	6" Handle Grip	6
			77	17" Vertical Press Handle Grip	2
22	Ø 1" Washer	6	78	#6 Allen Wrench (Tool)	1
23	Vertical Press Base	1	79	#5 Allen Wrench (Tool)	1
24	Vertical Press Arm	2	80	Ø 1 ½" x 1" Bushing	2
25	Leg Press Frame	1			2
26	Leg Developer	1	81	Ø 1" x Ø ½" Bushing	
27	Seat Incline Adjustment Frame	1	82	Ø 1" x Ø 7/8" Bushing	12
28	Single Handle	1	83	Ø 3/4" x Ø 3/8" Bushing	2
29	Front Press Base	1	84	4 3/8" x 1 3/4" Bracket	3
30	Weight Stack Cover	4	85	Ø 1 7/8" x 1 5/8" Rubber Bumper	1
31	Angled Floating Pulley Bracket	3	86	Ø 2 ½" x 1" Rubber Bumper	4
32	Double Floating Pulley Bracket	2	87	Ø 1 ½" x 5/8" Rubber Bumper	1
33	Lock Ring	2	88	Short Chain	2
34	Ø 1 3/4" Rubber Bumper	2	89	C-clip	5
35	146" Lower Cable	_ 1	90	Long Chain	1
36	102" Upper Cable	1	91	Ø 1" Cone-shaped End Cap	2
37	76" Butterfly Cable	1	92	M10 x 2 7/8" Allen Bolt	1
38	49" Front Press Cable	1	93	M10 x 5/8" Allen Bolt	10
		•	94	M10 x 1" Allen Bolt	13
39	94" Vertical Press Cable	1	95	M10 x 1 ¾" Allen Bolt	18
40	216" Leg Press Cable	1	96	M10 x 2 3/8" Allen Bolt	5
41	Backrest Board	2	97	M10 x 2 3/4" Carriage Bolt	4
42	Seat	2	98	M10 x 2 ½" Carriage Bolt	23
43	Arm Pad	2			
44	Manual	1	99	M12 x 4 3/8" Hex Bolt	2
45	Left Seat Support End Cap	1	100	M12 x 3" Hex Bolt	1
46	Butterfly Pulley Support	1	101	M8 x 2 ½" Allen Bolt	10
47	Leg Press Adjustment Frame	1	102	M8 x 1 5/8" Allen Bolt	2
48	Lat Bar	1			
49	Swivel Pulley Bracket	2			
50	Butterfly Adjustment Frame	2			
51	Ø1 ½" x 7/8" Bushing	8			
52	Leg Press Plate	1			
53	Selector Rod	2			
54	Weight Plate	28			
55	Selector Stem	2			
ວວ	Selector Sterri	2			

MWM-8900 WEIGHT RESISTANCE CHART

	WEIGHT PLATE						
Station	1	2	3	4	5	6	7
Low Pulley	35	45	55	65	75	85	95
Lat Pull	15	25	35	45	55	65	75
Butterfly	10	17	24	31	38	45	52
Leg Press	30	50	70	90	110	130	150
Front Press	35	50	65	80	95	110	125
Vertical Press	30	43	56	69	82	95	108

	WEIGHT PLATE						
Station	8	9	10	11	12	13	14
Low Pulley	105	115	125	135	145	155	165
Lat Pull	85	95	105	115	125	135	145
Butterfly	73	80	87	94	101	108	115
Leg Press	170	190	210	230	250	270	290
Front Press	140	155	170	185	200	215	230
Vertical Press	121	134	147	160	173	186	200

^{*}Numbers are approximate. Actual weight may vary.

^{*}Value for butterfly is for each arm.

IMPEX INC.

LIMITED WARRANTY

IMPEX Inc. ("IMPEX") warrants this product to be free from defects in workmanship and material, under normal use and service conditions, for a period of two years on the Frame from the date of purchase. This warranty extends only to the original purchaser. IMPEX's obligation under this Warranty is limited to replacing or repairing, at IMPEX's option.

All returns must be pre-authorized by IMPEX. Pre-authorization may be obtained by calling IMPEX Customer Service Department at 1-800-999-8899. All freights on products returned to IMPEX must be prepaid by the customer. This warranty does not extend to any product or damage to a product caused by or attributable to freight damage, abuse, misuse, improper or abnormal usage or repairs not provided by an IMPEX authorized service center or for products used for commercial or rental purposes. No other warranty beyond that specifically set forth above is authorized by IMPEX.

IMPEX is not responsible or liable for indirect, special or consequential damages arising out of or in connection with the use or performance of the product or other damages with respect to any economic loss, loss of property, loss of revenues or profits, loss of enjoyments or use, costs of removal, installation or other consequential damages or whatsoever natures. Some states do not allow the exclusion or limitation of incidental or consequential damages. Accordingly, the above limitation may not apply to you.

The warranty extended hereunder is in lieu of any and all other warranties and any implied warranties of merchantability or fitness for a particular purpose is limited in its scope and duration to the terms set forth herein. Some states do not allow limitations on how long an implied warranty lasts. Accordingly, the above limitation may not apply to you.

This warranty gives you specific legal right. You may also have other rights which vary from state to state.

IMPEX INC. 14777 Don Julian City of Industry, CA 91746

ORDERING REPLACEMENT PARTS

Replacement parts can be ordered by calling our Customer Service Department toll-free at **1-800-999-8899** during our regular business hours: Monday through Friday, 9 am until 5 pm Pacific standard time.

www.impex-fitness.com info@impex-fitness.com

When ordering replacement parts, always give the following information.

- 1. Model
- 2. Description of Parts
- Part Number
- Date of Purchase